



XPERIA 5 III

SONY®



1 SIM

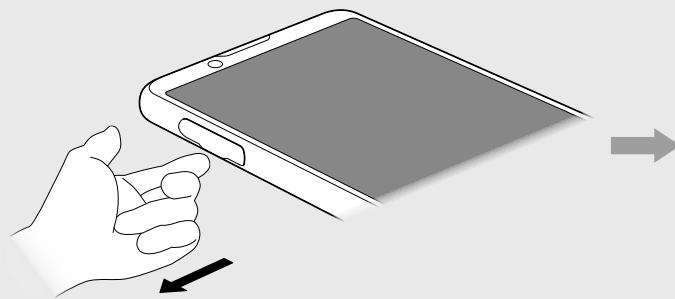

microSD
SIM1
...OR...
SIM2

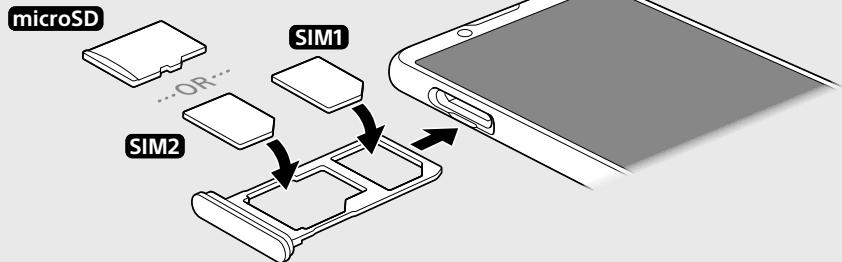

2 PWR ON


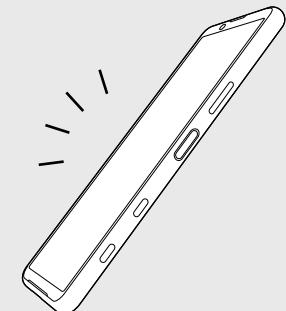
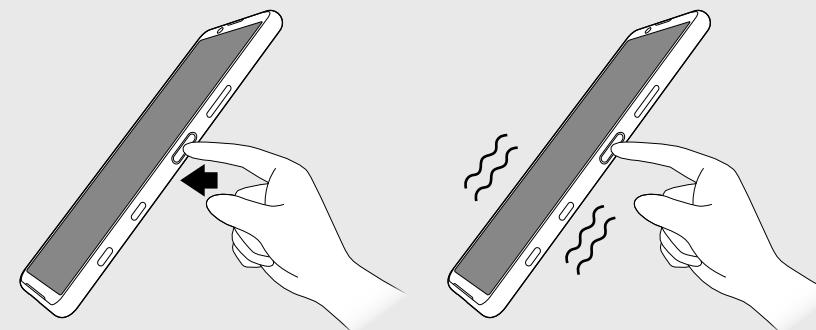


Startup guide

Ръководство „Бърз старт“
Úvodní příručka
Kurzanleitung
Installationsvejledning
Alustusjuhend
Guía de inicio
Aloituspäätös
Guide de démarrage
Οδηγός εκκίνησης
Priručník
Használatbavételei útmutató
Ræsihandbók
Guida introduttiva
Paleisties vadovas
Sākšanas celvedis
Opstartgids
Oppstartsveiviser
Instrukcja obsługi
Manual de Iniciação
Ghid de pornire
Starthandbok
Vodič za začetek uporabe
Úvodná príručka
Руководство по запуску
Баставакы нұсқаулық
คู่มือเริ่มต้นการใช้งาน
用户指南



Xperia Transfer 2

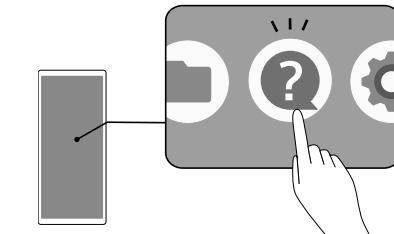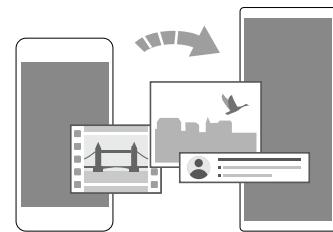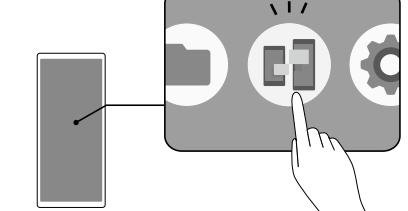



OR



https://rd1.sony.net/help/mobile/xperia-5m3/h_zz/



 ON/OFF
Google Assistant key *

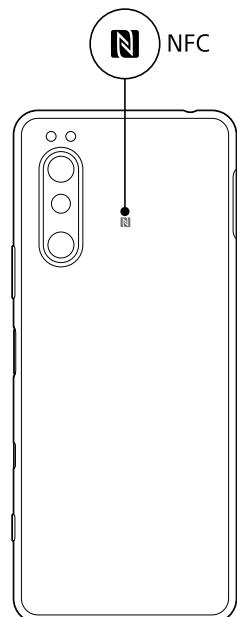

USB Type-C

* Назначение клавиши может отличаться в зависимости от страны/региона.
Перейдите в [Настройки] > [Система] > [Жесты] > [Клавиша быстрого вызова]
для получения дополнительной информации.

XQ-BQ62/XQ-BQ72



* 5 0 3 0 0 2 5 3 2 *

